


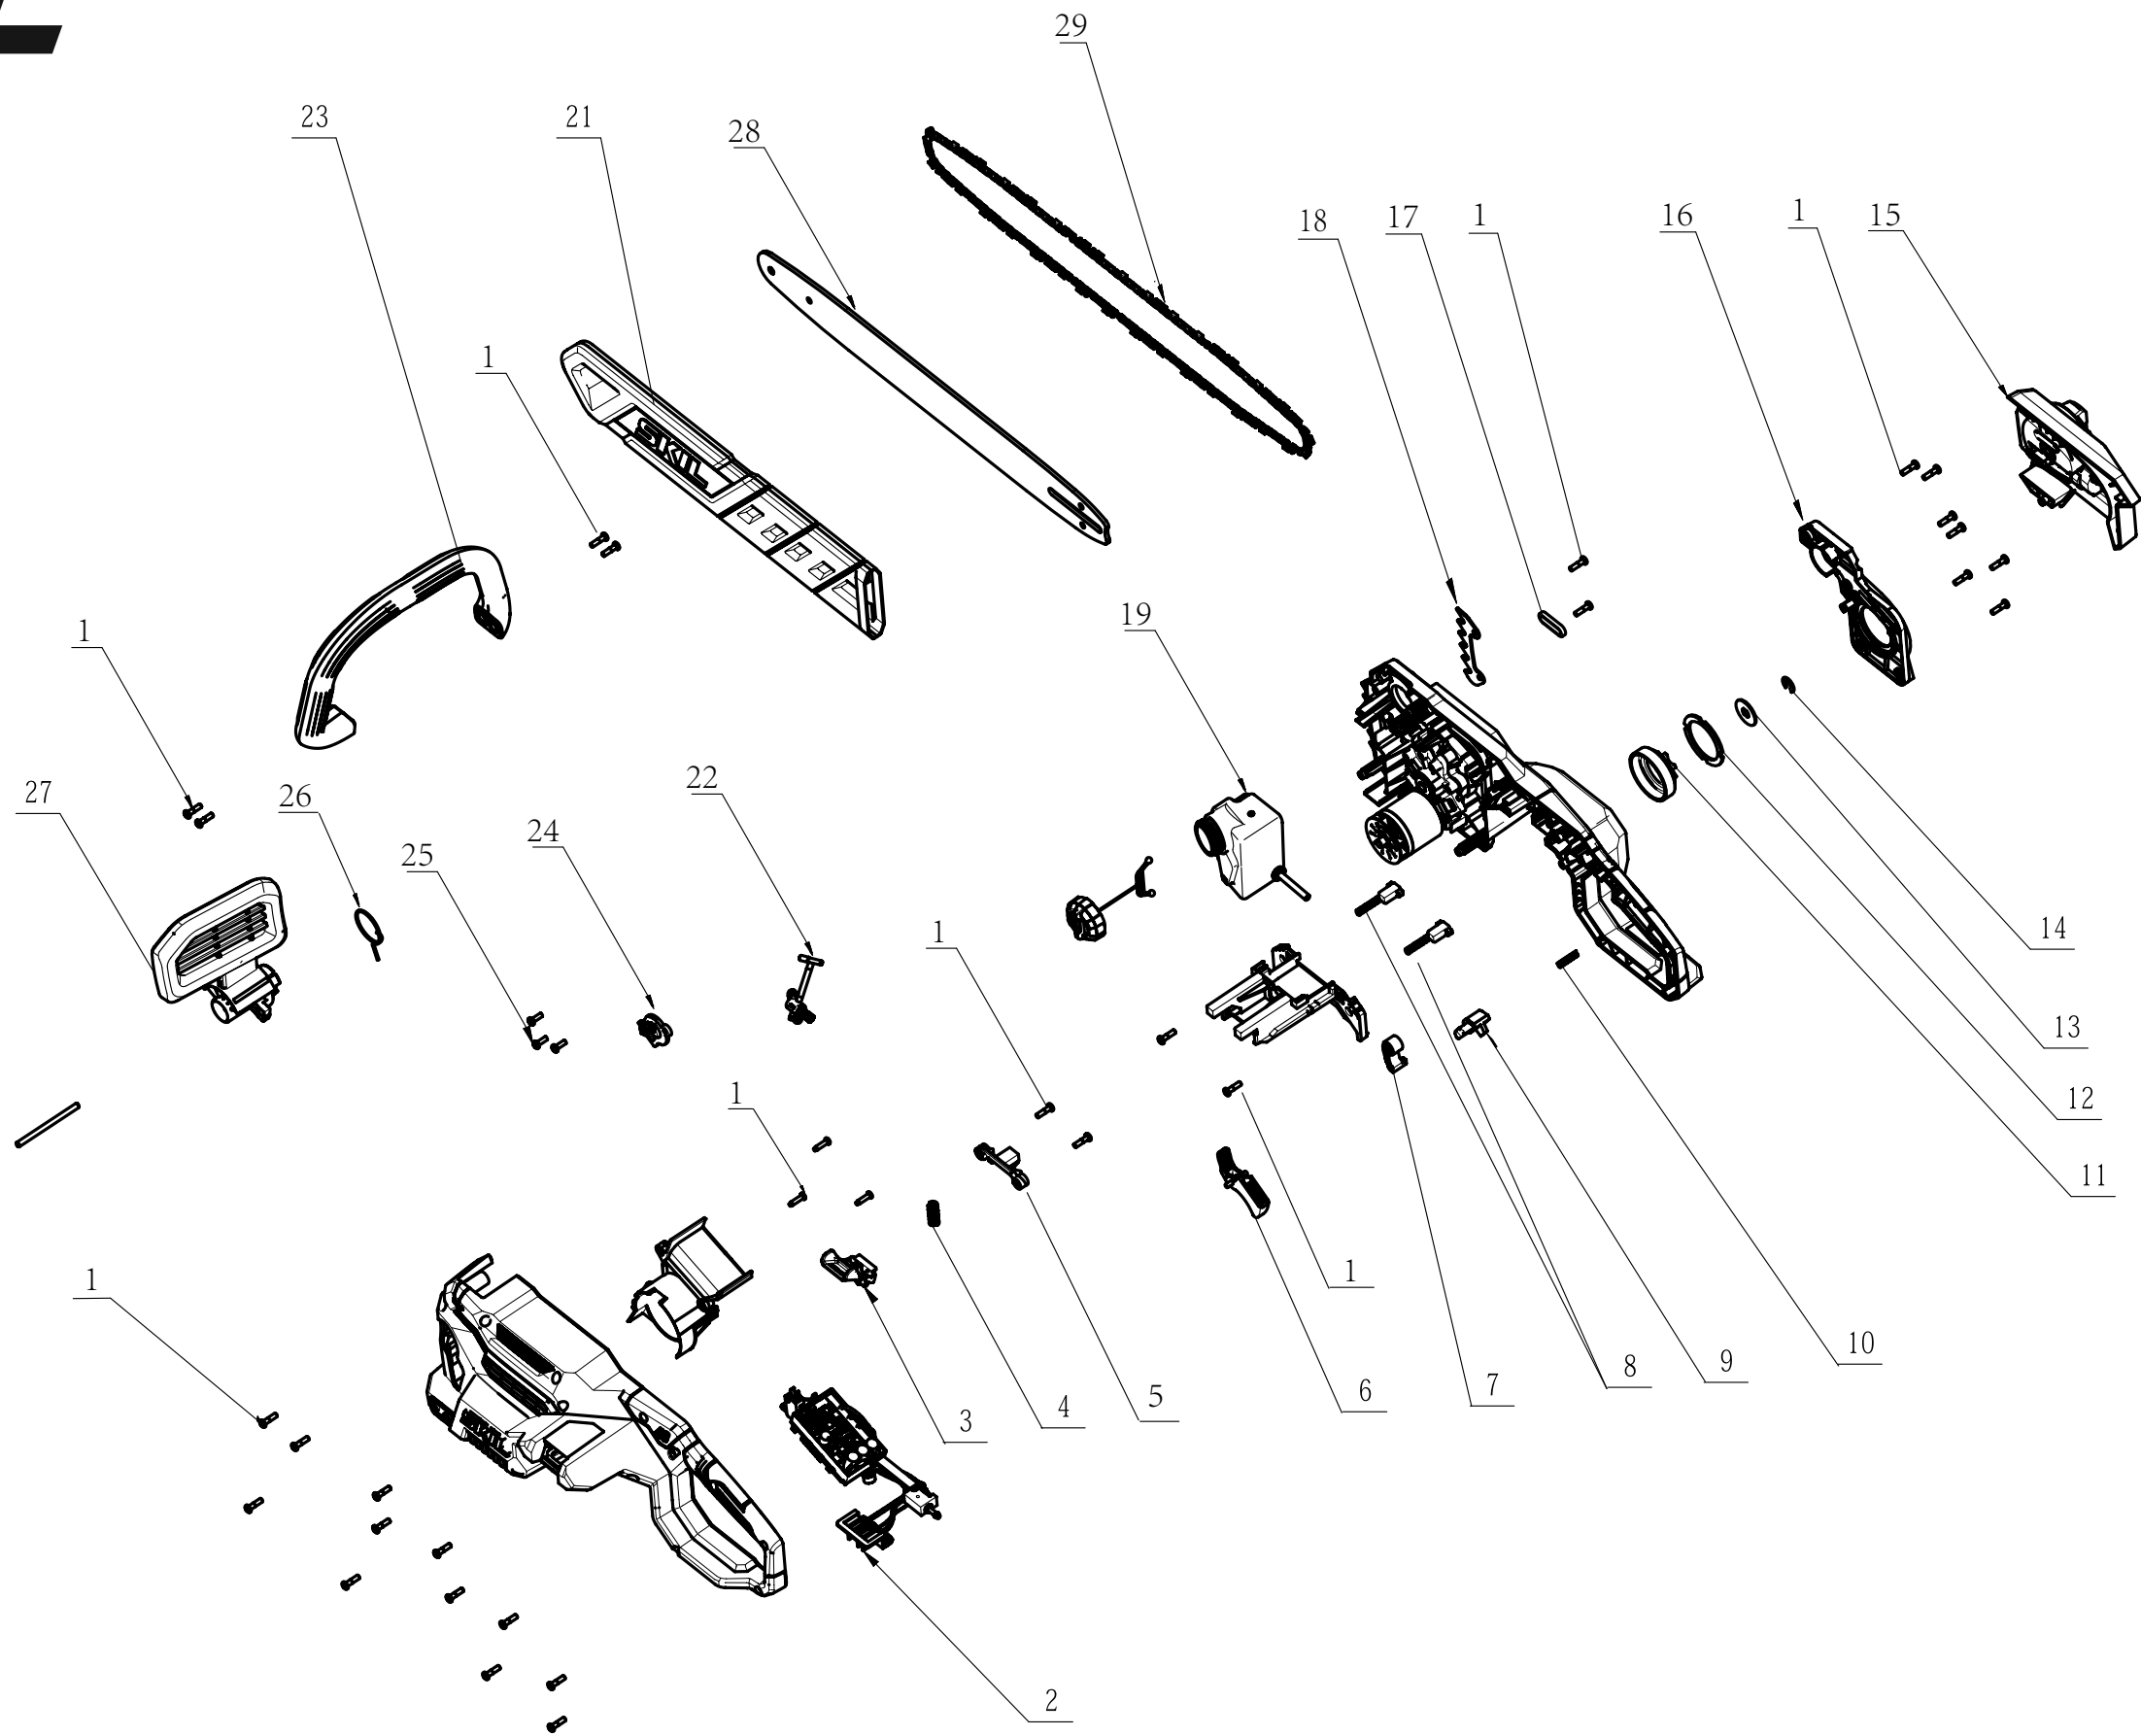

Product Description:Chain Saw
Model Number:CS1800C-00
Service Item Number:F840043001S01
Version:A
Issue Date: 2024/11/13



Service Part List_CS1800C-00_Version A

No.	Product Model#	Part Number	Description	Qty
1	CS1800C-00	5620479001	Screw	31
2	CS1800C-00	2831886001	Electric Assembly	1
3	CS1800C-00	3130296001	Power Pack Button	1
4	CS1800C-00	3660013001	Springl	1
5	CS1800C-00	3130433001	Support	1
6	CS1800C-00	2850697001	Trigger Assembly	1
7	CS1800C-00	3135192001	Trigger Lever	1
8	CS1800C-00	2827228001	Spring Assembly	2
9	CS1800C-00	3135219001	Lock off Button	1
10	CS1800C-00	3660427001	Spring	1
11	CS1800C-00	3556164001	Chain Wheel	1
12	CS1800C-00	5690440001	Felt Ring	1
13	CS1800C-00	5660208002	Gasket	1
14	CS1800C-00	5660242001	"E" Ring	1
15	CS1800C-00	2850410001	Cover Plate Assembly	1
16	CS1800C-00	3135221001	Cover	1
17	CS1800C-00	3130337001	Rubber Gasket	1
18	CS1800C-00	3705958001	Wood Teeth	1
19	CS1800C-00	2850694001	Kettle Assembly	1
20	CS1800C-00	2827223001	Kettle Cover Assembly	1
21	CS1800C-00	3135517001	Sheath	1
22	CS1800C-00	2829565001	Pump Assembly	1
23	CS1800C-00	3130129001	Front Handle	1
24	CS1800C-00	3130229001	Cover	1
25	CS1800C-00	5620040009	Screw	3
26	CS1800C-00	3660772001	Torsion Spring	1
27	CS1800C-00	3403082001	Board	1
28	CS1800C-00	3706993004	Guide Bar	1
29	CS1800C-00	3810738002	Chain	1